


## INSTALLATION INSTRUCTIONS

Pinning of Roadway Luminaire to Roadway Fitter (Plumbizer).

### Product Series WLC Arm & WL Fixture

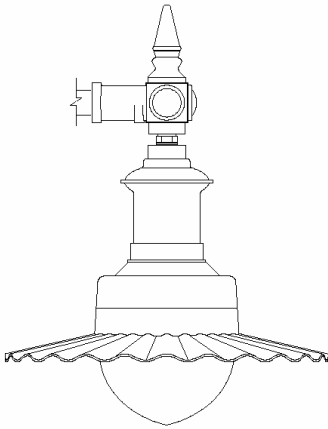

## IMPORTANT SAFETY INSTRUCTIONS

(For your protection and to avoid INJURY read carefully.)

- Trained and certified installers should perform installation.
- Use of proper lifting equipment and safety harness is a must.
- Safety measures such as use of safety glasses and steel toe shoes should be followed.
- DO NOT install in adverse weather conditions such as rain or heavy winds.


**WARNING:** NEVER attempt any maintenance of the Luminaire or disconnect any component while power supply is engaged. Make sure power supply is off before servicing Luminaire.

## Prior to Installation

Read carefully before installing the pins. If you do not understand these instructions, please contact your local ASL agent before installing.

## Installation

1. Disconnect power from the luminaire.
2. Remove existing setscrew from fixture and discard. This is where the pin will be applied.
3. Remove any and all wire from inside the plumbizer that runs into the Luminaire.
4. Engage (or ensure engagement of) plumbizer into the luminaire as shown.
5. Plumbizer must be a MAXIMUM of 0.31 (5/16) inch from the top of the luminaire to the bottom of the wrench flat. (*Note: Existing Set Screw Hole Location should be 3/8 (0.375) inches from the top of the luminaire. If it is not, a new hole 90 degrees to the existing hole will need to be drilled at this dimension – see step #6 for hole size.*)

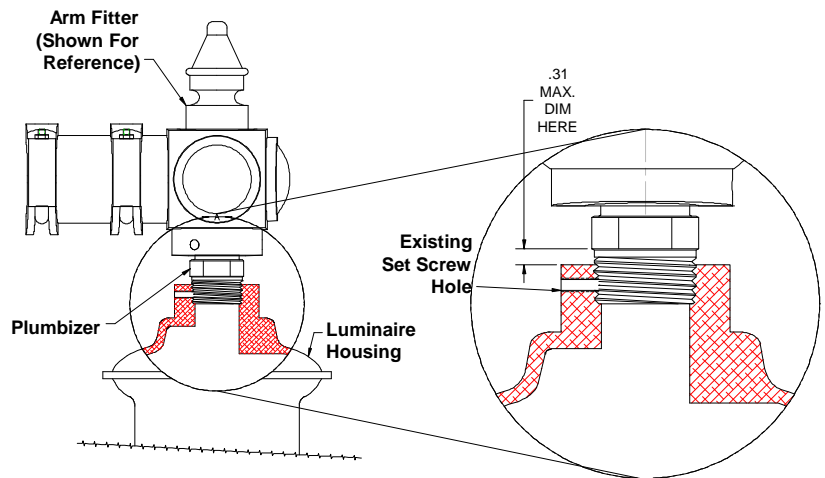

6. Use a 0.28 (9/32) drill bit and drill thru the entire assembly at the existing setscrew opening as shown. Use the existing setscrew hole as a guide.
7. Insert screw utilizing lock washers on both ends and tighten assembly with the jam nut. Make sure this connection is wrench tight.

